GB Fitting Instructions for Basic Carrier

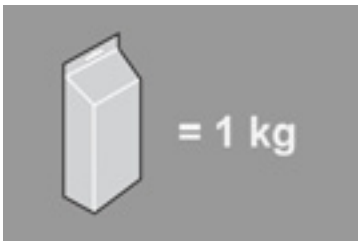

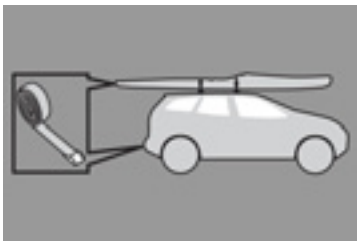

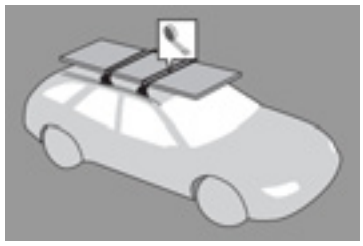

x 8

x 4

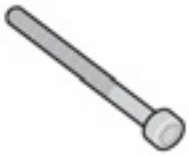
x 4

x 4

x 4

x 2

x 2

x 1

First Time Installation

- Remove parts from packaging and check contents. Contact your Prorack dealer if parts are missing or damaged.

- This kit fits type A, B, C and D.
- These instructions show type A crossbar fitted. They also apply to type B, C and D.

- Use keys to remove covers.

- Use hex screwdriver to reverse adjusting screw 10 turns.

- Remove clamp block by pressing backwards.

- Remove both pins from each leg (use spanner located inside left hand cover to assist).

- Detach foot from leg. Store loose parts in a safe place.

- Ensure that part A is inserted into part B as shown.

- Note: There is a left hand and right hand side.

- Select rail mount assemblies and match left and right assemblies to the left and right crossbar legs.
- Assemble foot from kit into leg by pressing it down.

- Ensure foot interlocks with leg.

- Using short capscrew and washer, secure assembly onto leg (use Hex Screwdriver supplied with crossbar to assist)

- Use two M5 x 12 mm self tapping screws to secure the assembly onto the leg.
- Do not over tighten.
- Repeat for all legs.

- Slide clamp back towards centre of crossbar.
- Insert M6 x 70 mm capscrew through square brass washer and rail mount assembly.

- Bolt should sit in groove as shown.

- Use 5 mm Allen Key to start thread.

- The M6 x 70 mm capscrew should go into brass clamp thread.

- Repeat for all legs.

For type C and D crossbars only

- When attaching this fitting kit to type C and D crossbars, a gap will exist.

- Attach the fairings (supplied with this kit) to the back of the leg.

  Note: There is a left hand and right hand side.

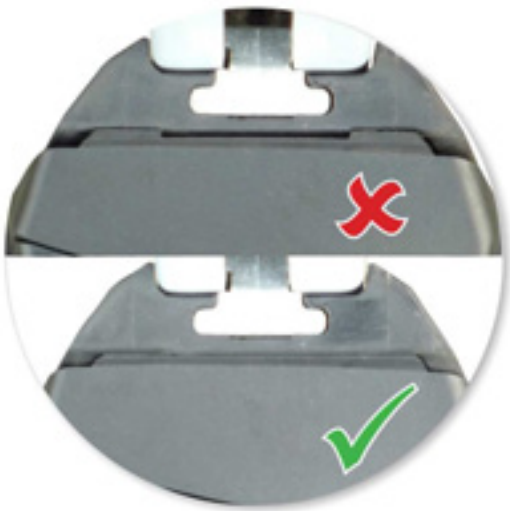

- Ensure the fairings 'click' into place and sit flush.

Fitment

- Adjust crossbar in or out to suit vehicle. Refer to the crossbar instructions for crossbar adjustment.
- Ensure that the crossbar is adjusted evenly at both ends.
- Crossbar can be positioned anywhere along the roof rail.

- Tighten adjusting screw to 5 Nm.

- Correctly installed crossbars. Side rails may vary to those pictured.
- Ensure that all legs clamp securely to the roof rails.

- Use 5 mm Allen Key to tighten clamp and secure crossbar to rail.

- Check crossbar is securely attached to the vehicle.
- Use keys to fit and lock covers

CAUTION: Regularly check screws are tight